 


MASSTABELLE „SYSTEM BAUER“

NW	A		B
	innen	außen	
50	49	52	70
76	76	79	98
89	89	92	120
108	107	112	145
133	132	138	159
159	156	163	179
194	192	199	230
50	62	-	-
76	89	-	-
89	113	-	-
108	133	-	-
133	150	-	-
159	170	-	-
194	248	-	-
50	49	52	71
76	76	79	99
89	89	92	121
108	107	112	148
133	132	138	163
159	156	163	182
194	192	199	231
50	-	83	9
76	-	115	13
89	-	134	14
108	-	160	15
133	-	190	18
159	-	208	19
194	-	253	18

„Bauer-System“




Kugel
zum Anschweißen



Hebelverschlussring



Becher
zum Anschweißen

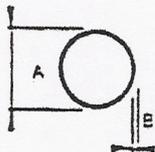

Gummiring passend
zu Bauer-System

>>> Diese Kupplungen sind nicht mit anderen Systemen austauschbar!